



E1/T1 PRI Gateway

Quick Installation Guide

Quick Installation Guide


PRI Gateway

Version 2.4

Table of Contents

| | |
|--|----------|
| Hardware Setup | 1 |
| Accessing the WEB GUI | 2 |
| Notification LEDs (On the Front Panel of the Gateway)..... | 3 |
| Creating SIP Trunks | 4 |
| Creating PRI Trunks | 4 |
| Call Routing Rules | 4 |

Hardware Setup

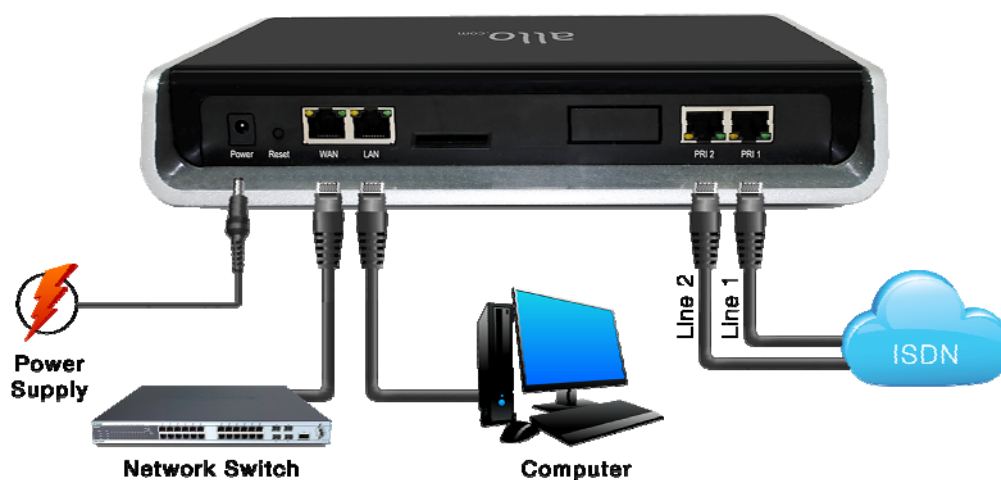

1. Unpack the items from the box
2. Plug one end of the RJ45 Ethernet cable to your PC & other end into the Management Port (LAN) of the PRI Gateway.
3. Plug one end of the RJ45 Ethernet cable into your Network Switch & other end into the WAN port of the PRI Gateway.

Note: Use Straight-through Ethernet cable to connect between the unit & Router/Switch/PC

4. Plug one end of the RJ45 cable into the PRI 1 port of the PRI Gateway & other end to the E1/T1 service provider socket.
5. Plug the power cable .to the PRI Gateway, wait until the Gateway boot up completely.

Note: *Ready* LED (LED 2) goes blue indicating that Gateway is boot up completely.

Configure your PRI Gateway according to the instructions below.

Accessing the WEB GUI

PRI Gateway WEB GUI can be accessed either through WAN or Management Interface (LAN)

- 1) Make the setup as described in Hardware setup section, Lets access the WebGUI through Management Interface (LAN)
- 2) Change the Network setting of the PC in manual mode (i.e. Static IP mode). Assign the IP address to the PC in the range of 192.168.113.xxx (E.g:192.168.113.10), net mask as 255.255.255.0 and gateway & DNS as 192.168.113.1.
- 3) Launch the web browser and enter the URL <http://192.168.113.2> which is the default IP address of the Management interface (LAN) of the PRI Gateway.



- 4) Login using the default username & password (Default: Username: admin; Password: admin). Successful login takes you to the Dashboard page. Observe the WAN IP address on the dashboard, this will be used to access the GUI from the WAN interface.
- 5) If your network is not enabled with DHCP server, configure the WAN port ip address manually in the **SETTINGS > Network Settings** section as per your requirement.

Note: Recommended web browser to access GUI is Mozilla Firefox.

ALLO.COM'S
PRI Gateway

Firmware Version 1.1.6
Thu 27 Jun 2013 17:18:33

Home SETUP ADVANCED TOOLS STATUS SAVE ALL

Welcome Administrator Logout

Dashboard Refresh

Gateway Status

SIP Status 42%

Registered: 3 Unreachable/Unknown: 4 Total: 7

PRI Span Status

Span 1: Active

Span 2: Active

Call Statistics

Total Active Calls: 0

System Status

Uptime 53 min

Network Information
LAN IP: 192.168.113.1
WAN IP: 192.168.0.47

Internal Memory Usage
7% Total: 204 MB
Used: 15 MB Free: 189 MB

CPU Usage
4%

Load Average

| 1min | 5min | 15min |
|------|------|-------|
| 2.00 | 2.00 | 1.90 |

COPYRIGHT © 2012-2013. ALLO.COM'S PRI GATEWAY - WEB PANEL. ALL RIGHTS RESERVED.

Notification LEDs (On the Front Panel of the Gateway):

| LED 8 | LED 7 | LED 2 | WAN | LAN | Power |
|--|--|--|--------------------------------------|--------------------------------------|----------------------------|
| Blue On- PRI 1 link is up (No Alarm) | Blue On- PRI 2 link is up (No Alarm) | Blue On- System Ready Blue Blink- Factory Reset | Orange Blinks- WAN link is up. | Orange Blinks- LAN link is up. | Orange On- Power is on. |

Creating SIP Trunks

This will allow you to make calls using your VoIP Account.

- 1) Click **Add a SIP Trunk**
- 2) Create a SIP account with the preferred registration mode.
Registration Mode:
 - **None:** IP peer trunking
 - **From Gateway:** Gateway is registering to PBX or VoIP service provider.
 - **To Gateway:** Endpoint registering to Gateway.
- 3) Enter the PBX or VoIP service provider IP address for registration modes "From Gateway or None"
- 4) Click authentication, if it is required
- 5) Click registration and add registrar address
- 6) Click on "Create" to save the settings.

Creating PRI Trunks

This will allow you to make calls using your PRI line.

- 1) Connect your ISDN PRI line to the PRI 1 port of the PRI Gateway
- 2) Click on the **SETUP > ISDN PRI Trunks** link in the GUI, then select **Create PRI Trunks**
- 3) Enter Name your Trunk (Office Line 1 for example), Outbound Caller ID and Click **CREATE**
- 4) You have a live PRI line plugged to your PRI Gateway.
- 5) Click on "Create" to save the settings.

Call Routing Rules

Depending on the number you dial, the PRI gateway will select the configured PRI/SIP Trunk.

- 1) Click **Add Call Routing Rule** to add an incoming or outgoing routing rule for ISDN and VoIP call.
- 2) Select "Incoming type" and required trunk name under "Incoming from".
- 3) Enter the Dial Pattern to match the expected number. Following are the characters supported in the Dial Pattern.
 - X matches any digit from 0-9
 - Z matches any digit from 1-9

N matches any digit from 2-9
[1237-9] matches any digit or letter in the brackets
(in this example, 1, 2, 3, 7, 8, 9)
[a-z] matches any lower case letter
[A-Z] matches any UPPER case letter
. Wildcard, matches one or more characters
! Wildcard matches zero or more characters immediately.

- 4) **Trim Digits:** Allows the user to specify the number of digits that will be stripped from the dialed number. For Ex: If you configure the pattern as 9X. and you want to strip 9, then the count of the digits stripped is 1, which must be placed in Trim Digits field.
- 5) **Prepend Digits:** Allows the user to specify the digits which are prepended before placing the call via trunk. For Ex: If dialed number is 8789763010 and if you want to prepend 44 as a country code then place 44 in prepend digits field.
- 6) **Add Outbound Call Route:** Select proper SIP trunk or PRI trunk or Time route Group, where the call as to be routed to.
- 7) Click on “Create” to save the settings.

Note: Click on “**Save All**” to apply all the changes to the call Manager.

THE FULL VERSION MANUAL WILL PROVIDE YOU DETAILED INSTRUCTIONS ABOUT THE FULL FEATURE SET OF THE CEM PRI GATEWAY.

THANK YOU!